

# AV System User Guide

For VH and FH Classrooms



**For technical assistance, or if you have any questions, please contact Classroom Operations at 212-998-6317, or email [avrequest@exchange.law.nyu.edu](mailto:avrequest@exchange.law.nyu.edu)**

# Entering the System Menu



To enter the system menu, touch any area on the splash screen

## Presentation



- Select the **Presentation** menu to reveal the presentation options
- Select your desired presentation option from the drop-down list
- Once your presentation option has been selected, the projector will turn on, and the projection screen will lower automatically
- If “Laptop” is the option selected, make sure your laptop’s video output is enabled

# Audio Volume



- Select the **Audio Volume** menu to reveal the audio volume options
- Adjust the volume level on any audio option by pressing the up or down arrows
- Pressing the mute button will immediately cut audio to the room
- The menu will disappear after your adjustments have been made

# Environment Controls



- Select the **Environment** menu to reveal environment control options
- To adjust the lights, select one of the three options available
- To lower/raise the projection screen or the shades, press the up or down arrows
- The Environment menu will disappear after you have made your selection